


Note: This inverter is designed to operate with T5 type fluoro tubes

FL12-13	Suits Tube 8W-13W
FL24-13	Suits Tube 8W-13W

1. Disconnect the battery supply before contact with any component of the Inverter
2. Ensure that the wire used for connecting the inverter has an insulation rating of minimum 240 volt
3. When wiring, use an in-line fuse holder with a fuse (2A for 12V and 1A for 24V) and place in the positive line
4. Ensure that the four (4) filaments (two either end) on the tube are connected to the module connectors as marked (i.e. 1 & 2, 3 & 4)
5. Check that polarity is not reversed (positive to negative etc) and that correct voltage is applied e.g. 12V supply is connected to a 12V inverter.
6. Mount in a well ventilated area
7. Locate the inverter as close as possible to fluoro tube

Recommended Fuses	
12V	2 amp
24V	1 amp

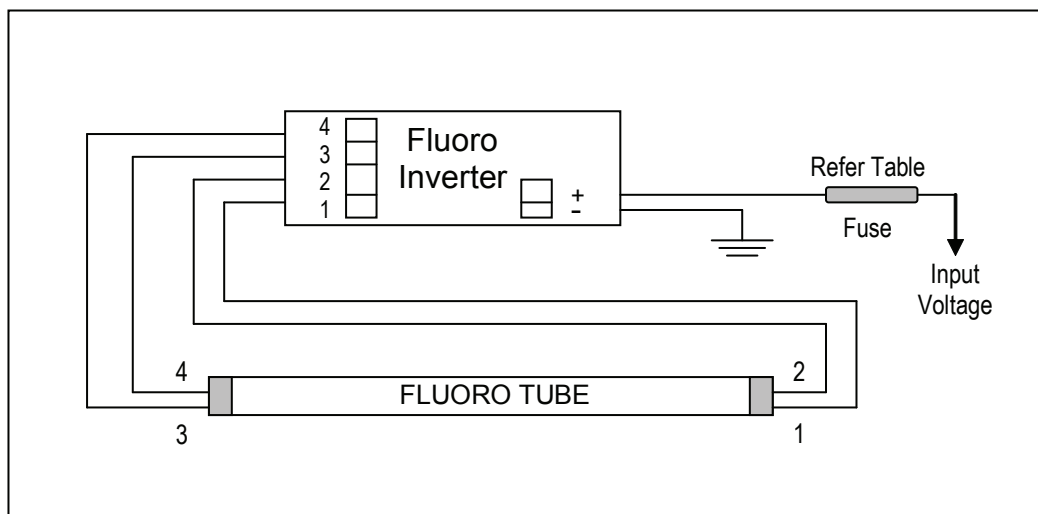

Note: We recommend the use of fibre washers with locating screws (if screws are being used) when securing module. If metal washers are used, ensure they (or any other metal surface e.g. screwdriver) DO NOT touch transistors. If transistors are shorted, damage to the module may result which void warranty.

Warranty Conditions: The product is warranted to be free from defects in materials and workmanship under normal use and service for a period of 24 months from the date of sale. This warranty covers defective parts and workmanship provided that the product is shipped prepaid to the seller within 24 months of purchase of goods. This warranty is limited to the repair or replacement (at the manufacturers' discretion) of parts and shipping prepaid to the original despatch destination. We regret that no liability can be accepted for consequential or special damages of any kind howsoever arising in connection with products supplied by the seller. This warranty is in lieu of all other warranties expressed or implied. No representative is authorised to assume for the seller any other liability in connection with the seller's products.